


calendar month, the aircraft is a subject to a monthly charge according to our [PRICING SCHEME](#).

Not Used – If the aircraft is temporarily out of operation or soon will be joining the fleet, this status allows to exclude aircraft from billing (given it is set as ‘Not Used’ for a full calendar month) while maintaining the view of this aircraft throughout the system (in the filters – for historical data).

Deleted – this status deactivates the aircraft and hides it from the view throughout the system. It should be used when the aircraft leaves the fleet.

It is not possible to permanently remove an aircraft from the system for historical data purposes.

Aircraft positions

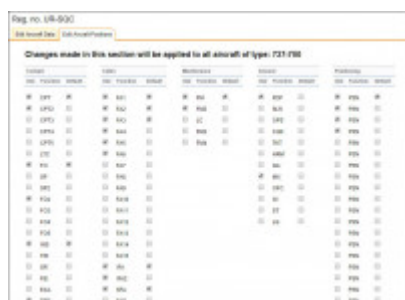

The screenshot shows a table titled 'Changes made in this section will be applied to all aircraft of type: 737-700'. The table has columns for 'Aircraft Type', 'Position', 'Use', 'Function', and 'Default'. The rows list various aircraft types and their corresponding positions, with checkboxes for each column.

Editing aircraft positions

The tab „Edit Aircraft Positions” gives you a selection of crew positions available in the system. These are set per aircraft type, not a particular registration number, so if you add another aircraft of the same type, the positions will be copied over. These need to be defined in the fleet settings in order to be later available to be assigned to the crew members.

A number of positions are pre-defined by the system, but you can adjust those to your needs. There are five position groups:

- Cockpit
- Cabin
- Maintenance
- Ground
- Positioning

Each of the groups contains three columns:

- Use – this checkbox activates the position for this aircraft type
- Function – position code
- Default – this checkbox makes the position automatically available for assigning a crew member when adding a flight on this aircraft type

IMPORTANT!

The positions in Maintenance and Ground groups are excluded from FDP and duty, calculation, Positioning functions are included in duty calculations.

Example: If a crew member is assigned the rating FM (Flight Mechanic in Maintenance group) and a PSN rating (which allows to place a crew member on a flight in order to be repositioned) in the Positioning group and then is added to a flight on position PSN, they will have their duty calculated, but no FDP. Cockpit and Cabin groups are included in both FDP and Duty calculations.

Click below for a mini tutorial on the above instructions including the basic aircraft setup.

[video]

Alternatively, for full information and all available options in the area of the fleet setup, you can visit our main manual (link) or a full tutorial video.

[video]

From:

<https://wiki.leonsoftware.com/> - **Leonsoftware Wiki**

Permanent link:

<https://wiki.leonsoftware.com/getting-started/step-1.-fleet-setup?rev=1523450062>

Last update: **2018/04/11 12:34**

