

FTL Settings

Export to Excel

AOC

1000

AOC Revision

initial

aircraft

☒ (not assigned)

☒ A-TEST

☒ B-ART1

☒ F-G4U

☒ GND

☒ Z-LEON

☒ A-8000

☐ A-XXXX

☒ D-LEON

☒ G-LEON

☒ LEON01

Duty & FDP offsets

parameter	checked?	value
reporting_time_default	<input checked="" type="checkbox"/>	01:00
reporting_time_positioning	<input type="checkbox"/>	00:00
reporting_time_scheduled	<input type="checkbox"/>	inf
reporting_time_new	<input type="checkbox"/>	inf
reporting_time_single_pilot	<input type="checkbox"/>	inf
custom_reporting_time_per_departure	<input type="checkbox"/>	
custom_reporting_time_per_destination	<input type="checkbox"/>	
reporting_time_distance_dependent	<input type="checkbox"/>	
reporting_time_cabin	<input type="checkbox"/>	inf
long_haul_flight_duration	<input type="checkbox"/>	inf
reporting_time_cockpit_long_haul_flight	<input type="checkbox"/>	00:00

FTL Settings section

This section allows you to review the **FTL Settings** that are implemented based on OM part 7.

Apart from very specific settings you can also:


- **Export to Excel** - option to export the settings to excel file. The file will include the settings parameters as well as the explanation of each parameter definition.
- **AOC** - the name of the AOC. If there are more than the one you can check the settings of each by choosing the AOC you would like to see in the drop-down. This is the AOC that is chosen in the OPS > Flight tab.
- **AOC Revision** - field indicating the date of the last AOC revision (change). If it is set to 'initial', it means that this AOC applies form the very beginning.
- **Aircraft** - marked aircraft assigned by default to the chosen AOC. If ticked, this means that the FTL times will automatically apply to the Crew when the flight is created. If unticked, it means that there might be another 'AOC' created (AOC dropdown) or this AOC does not apply to this aircraft.

Cumulative Duty Limit Notification Service is explained below.

Cumulative Duty Notification

This function is available upon request - limits are customised by Leon Support depending on the operator's preferences. To set up a margin that triggers the facility, please contact Leon Support at support@leonsoftware.com.

Cumulative Duty Notification is a facility that **provides information** when cumulative duty is **close to the maximum level** (just before it is exceeded).

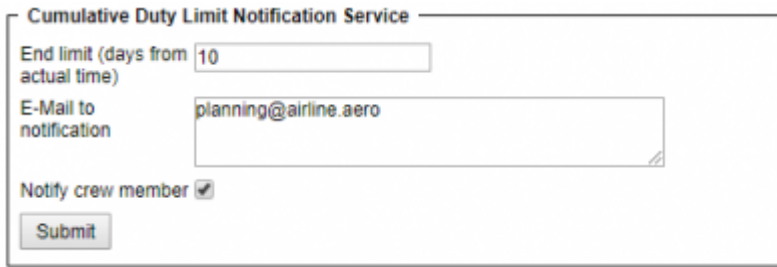

Cumulative Duty Limit Notification Service

End limit (days from actual time)

E-Mail to notification

Notify crew member ☒


Cummulative Duty Notification - Setup screen

There are following options available:

1. **End limit (days from the actual time)** - in this field input number of days forward for Leon to check 'Cumulative duty'.
2. **E-Mail to notification** - in this field input email addresses to which notifications should be sent.
3. **Notify crew member** checkbox - if this checkbox is ticked, the notification email will also be sent to the crew member to whom the notification applies

When this is defined, a notification email is sent whenever **Cumulative duty hours** for a member of the crew are over the stated value.

Email reads:

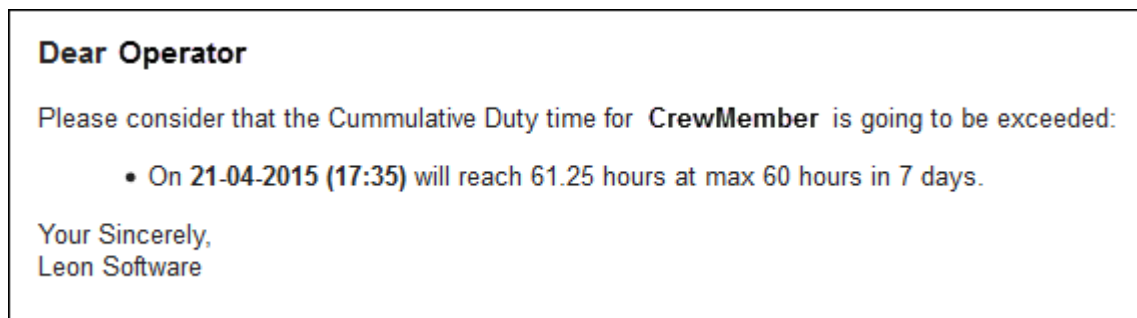

Dear Operator

Please consider that the Cummulative Duty time for **CrewMember** is going to be exceeded:

- On 21-04-2015 (17:35) will reach 61.25 hours at max 60 hours in 7 days.

Your Sincerely,
Leon Software

FDP extension options

Limit	Actual
Rest before duty min 12h	167h 45m
Block time -	8h 50m
Flight Duty Period max 9h	9h 50m
Duty -	10h 20m

Option to plan FDP extension in CREW tab

It is possible to select an extension mode. In order to do that please contact support@leonsoftware.com

Each of the modes will affect how 'FDP extensions' should work: whether it should apply automatically or only in case of violation (default setting).

There are **3 modes** to choose from in 'FTL Settings':

- **at any FDP violation** - FTL extension mode that applies FDP+ whenever FDP violation appears during realization, regardless of the plan. This means that FDP+ does not have to be planned in order to be applied
- **at planned FDP violation** - FTL extension mode that applies FDP+ whenever FDP violation appears during both plan and realization. This means that FDP+ must be planned in order to be applied
- **always unless manually disabled** - FTL extension mode that applies FDP+ always, even if not needed. This mode works best with "Require manual enabling of FDP+" checked in 'Flight editing' settings (if this checkbox is ticked, 'FDP+' in 'CREW' tab is unticked by default)

Require manual enabling of FDP+ ☒

Particular settings explanation

In this section, we explain the purpose of some of the settings:

1. **use_planned_reporting_in_case_of_small_delay** - applies to the following rule in OM7:
Where the delay is 4 hours or more, the maximum FDP shall be based on the more limiting time band of the planned and the actual report time and the FDP starts 4 hours after the original report time. It works correctly when the checkboxes are marked in the FTL settings but also original STD must be kept, delayed departure inserted in 'ETD' field in the Flight Watch and reporting time changed manually. This way Leon will calculate from new reporting but 'Max FDP'

based on the original reporting time

From:

<https://wiki.leonsoftware.com/> - **Leonsoftware Wiki**

Permanent link:

<https://wiki.leonsoftware.com/leon/ftl-settings?rev=1598265921>

Last update: **2020/08/24 10:45**

